


### 部分1: 開始




#### 1 啟動**CHROMEBOOK**

Chromebook啟動只需八秒鐘。很簡單，打開蓋子，按右上角的開關鍵。

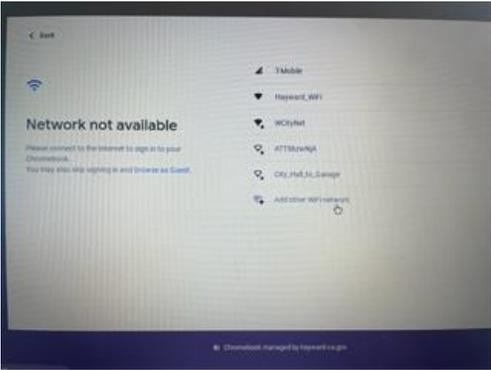

#### 2 連網或使用蜂窩數據

從網絡菜單選取您想使用的網絡名。如果無法聯網，您可使用 T-Mobile的蜂窩數據，點擊上面的 "T-Mobile"網絡名，在這個選項旁看到一個小三角。

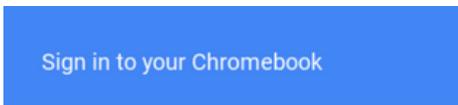

#### 3 開啟谷歌賬號或以客戶身份瀏覽

Enter your email

More options

NEXT


開啟谷歌賬號或以客戶瀏覽。

\*如果您以自己的賬號開啟，谷歌會記住您的偏愛喜好。


\*如果是客人，則不會記住偏愛喜好。

### 部分2: 創建谷歌賬號 (您還沒有現存的谷歌賬號時)

1 點擊 "創建新賬號"。您也可以去 **WWW.GMAIL.COM** 創建新賬號。

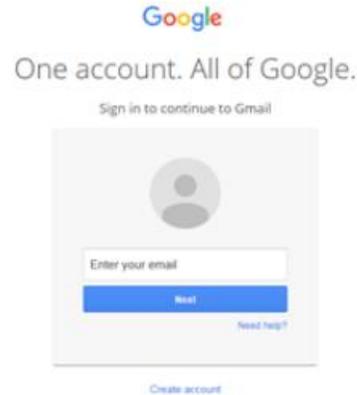


2 填上名字、出生日期及其他

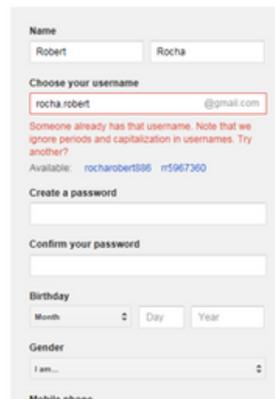

**Note: The hardest part is finding a username that you like and does not already exist.**


3 鍵入顯示的文字，同意使用服務規則。

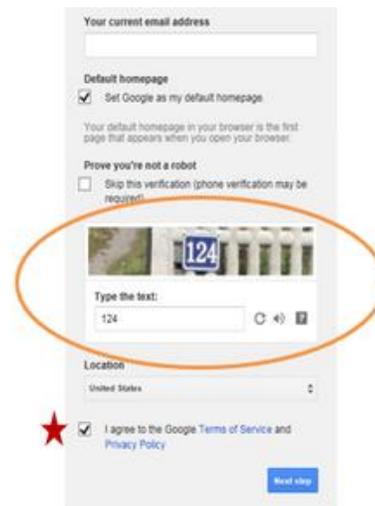

4 點擊 '下一步'

### 部分3: 認識 CHROMEBOOK


#### 1 主屏幕與程序菜單

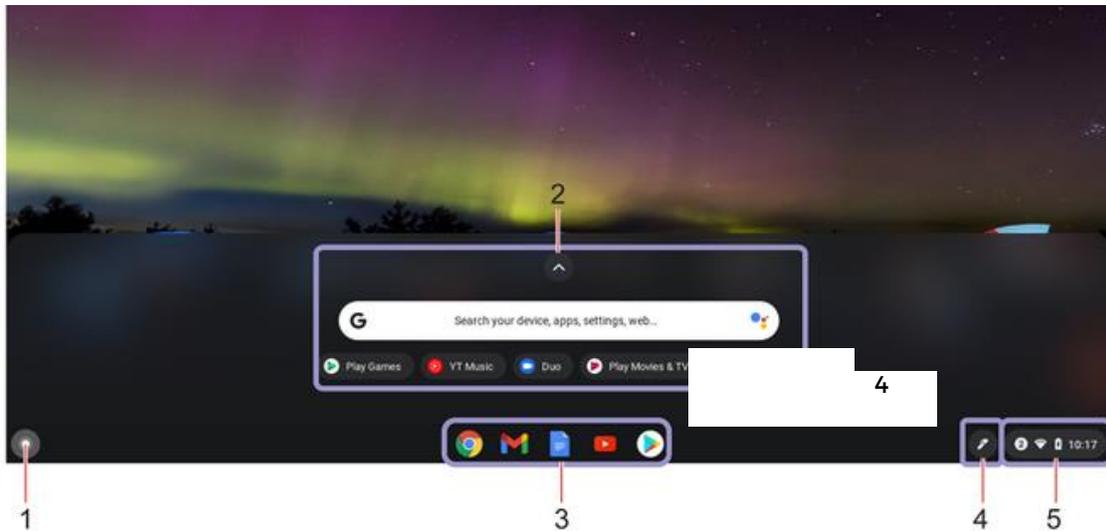

- 啟動按鈕: 打開搜索箱和程序開啓。
- 搜索箱和程序開啓: 鍵入您的設備名稱、程序或網頁，如看到程序名，點擊可快速進入。
- 書架: 把您常用的程序和網頁別針在書架上，以方便使用。
- 管理網絡鏈接、更新和設置。網絡鏈接狀態、電池量、以及時間設為自動顯示。

### 部分3: 認識您的CHROMEBOOK

#### 3 網站瀏覽

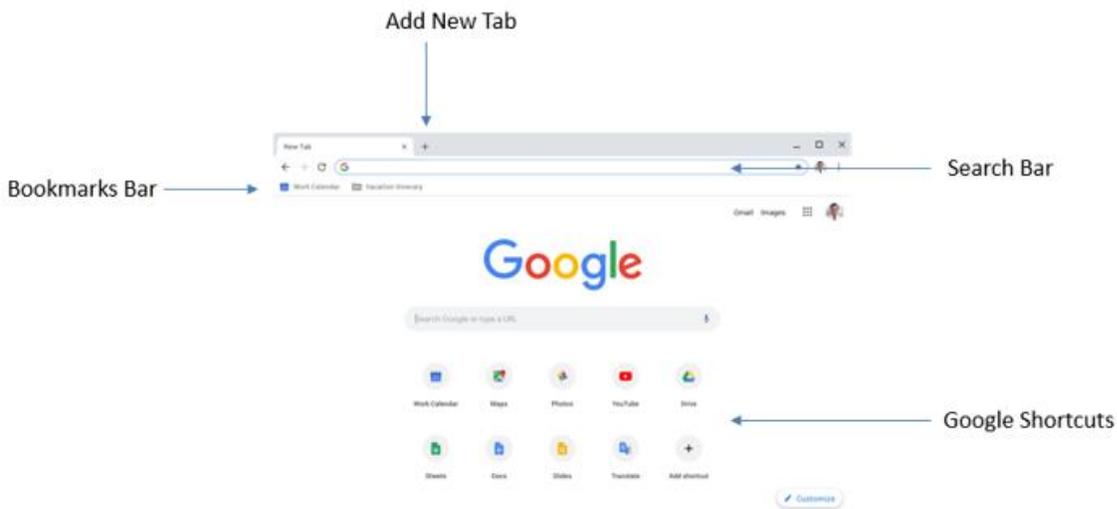

#### 4 MANAGING BOOKMARKS

##### Add a bookmark

1. On your computer, open Chrome.
2. Go to the site you want to visit again in the future.
3. To the right of the address bar, click Star ☆.

##### Find a bookmark

1. On your computer, open Chrome.
2. At the top right, click More ☰ > **Bookmarks**.
3. Find and click a bookmark.

**Tip:** You can open bookmarks faster with the bookmarks bar. You'll find your bookmarks under the address bar. Click a bookmark to open it.

To turn the bookmarks bar on or off, click More ☰ > **Bookmarks** > **Show Bookmarks Bar**.

# 5 鍵盤



	Camera		Webcam privacy shutter
	Microphone		Power button
	Touchpad		



	Camera*		Webcam privacy shutter
	Microphone*		Touch screen
	Touchpad		